Toyota Genuine

Instruction Manual and Warranty Card Attached Separately

Multi CD Changer

Toyota Part Number: 08601-00670



Please read this instruction manual and the attached warranty card carefully before use.
Then keep them in a safe place and reread when you have questions.

■ Please be sure to check that the warranty card includes the "purchase date and retailer name" and receive it from the retailer.

Toyota Motor Corporation

Thank you very much for purchasing the genuine Toyota Multi-CD Changer.

This manual describes "situations where the driver or others may be injured" and how to avoid them using the following indications. These are important for safety, so please be sure to read and follow them.

A Caution	If the instructions are not followed, there is a risk of injury or accident.

Important points that must be observed for your vehicle and useful information are described using the following indications.

C Advice	Points to observe to prevent vehicle malfunction or damage. What to Do When Your Car Breaks Down
Knowledge	Useful Information to Know Things You Should Know

● This manual explains the operation of the multi-CD changer. Please read it together with the vehicle's main manual.

Advice

Do not keep this unit operating for a long time when the engine is off. Doing so may drain the battery and prevent the engine from starting.

Table of Contents

■This unit does not operate independently. Please use it in combination with the dedicated set. Also, by connecting the navigation system, it becomes possible to play map discs (including Navi Research software).

The Navi Research software can use the Navi Research Ver.2.1 CD-ROM disc.

However, some functions may not be supported.

Precautions for Use (Please be sure to follow)

A Caution



- When operating the audio system while driving, please do so with sufficient care to avoid interfering with safe driving.
  Also, enjoy the sound at a volume level that allows you to hear outside noises sufficiently.
  This can prevent traffic accidents.

- Do not disassemble or modify this unit.

  The inside of this unit has a precise structure, so if any malfunction occurs,
  please consult the retailer where you purchased it.

Knowledge

Failure to comply with the following may cause malfunction.

- Please always store the CD magazine in its case, avoiding direct sunlight. Also, do not drop or handle the CD magazine roughly.
- When opening and closing the trunk room door during or after car washing or in rainy weather, please be careful to prevent water droplets or rainwater from getting on the multi-CD changer.
- If water droplets or rainwater get on the multi-CD changer, please wipe it immediately with a dry cloth or similar.
- Please be careful to ensure that luggage does not hit the multi-CD changer when loading or unloading items or while driving.
- When it is cold or rainy, just as the car windows fog up, frost (water droplets) may form inside the unit (condensation phenomenon). In this case, the sound may skip or playback may stop, so please ventilate or dehumidify for a while before use.
- This device can only use CDs and CD-ROMs marked with the symbol below.

  COMPACT disc   COMPACT disc DIGITAL AUDIO

- In cases of severe vibration, such as when driving on rough roads
  There may be skipping or sound dropouts.

Handling of CDs (Compact Discs)

Knowledge

Handling Precautions

- ● Dirt, dust, scratches, warping, etc., on the compact disc may cause malfunctions such as skipping. Please be espec ially careful when taking discs in and out of their cases.
- ■ Do not attach paper or other materials to the label side, n or scratch it.
- ● Do not bend compact discs.

Storage Precautions


- ● When not playing for a long time, always store co mpact discs in their cases to avoid dirt, dust, scratc hes, warping, etc.
- ● To prevent warping and possible unusability, avoi d placing compact discs in the following locations.


1. Places exposed to direct sunlight for extended periods.
2. Places with high humidity, dirt, or dust.
3. Places where heat from heating equipment directly hits.
4. Car Seat, On top of the dashboard.

Precautions for Using New Compact Discs


- ● New discs sometimes have burrs (see right illustra tion) remaining on the disc's center hole or outer e dge. Using such discs may cause improper disc pla cement and malfunction. In such cases, please rem ove the burrs inside the center hole or on the outer edge of the disc beforehand using a thin rod-like o bject (for example, a ballpoint pen) as shown in the right illustration before use. Compact Disc Cleaning

How to Hold a Compact Disc





Hold it so as not to touch the disc surface. Outer edge burr Ballpoint pen, etc.




Burr on the center hole

- ● When dirt or dust adheres to the compact disc, wipe it with a s oft cloth moistened with water, then wipe it dry with a dry cloth.

Knowledge

Do not use benzine, analog record cleaners, or anti-st atic agents, as they may damage the compact disc.


When wiping the disc surface , always wipe from the inside toward the outside.




Preparation Work: How to Remove the Tray and Insert the Disc

How to Insert the Disc


① Place the magazine with the "disc" mark facing up,
press the tray lock release button,
and pull out the tray.



② Hold the disc by pinching the center
hole and the edge, and place it on th
e tray with the label side (the side wit
h the track listings) always facing up.



③ Hold the tray's A section with the mag
azine's "disc" mark facing up, and ins
ert one disc straight into each tier of t
he tray until you hear a click.




Knowledge

Please do not insert it out of sequence at this time.


The CD auto changer malfunctions

There are times when this may occur.

● Please be sure to load exactly 12 discs into the tray.
(Please insert only the tray even when ther
e is no disc.)



Please be careful not to insert the disc incorrectly.




How to Remove the Disc

① Place the magazine with the "disc" mark facing upward

Pull out the tray. At this time, please be very careful not to drop the discs inside.

② While holding the disc by pinching the center hole and the edge, remove the disc as shown in the illustration.

Please.



Knowledge


1. Please use the designated CD magazine.
2. The tray is designed for 12cm CDs.
   When using an 8cm CD, please purchase the 8cm CD adapter (08601-00349) from the dealer.

The CD magazine holds 12 trays (CDs).

4. When inserting the tray into the CD magazine, please be careful to avoid misalignment.
   Please.
5. Do not insert more than two CDs into each slot.
   It may cause damage to the CD or lead to malfunction.
6. Do not use commercially available 8cm CD adapters.
7. Please contact the dealer regarding CD-ROM discs that can be played on this device.

How to Insert and Remove the Magazine


1



Slide the sliding door to the right to open it.


2

When inserting




With the top of the magazine facing up (as shown in the illustration), press it in until you hear a click.

When removing



To remove the magazine, press the eject switch. The magazine will be automatically pushed out.

3



Close the sliding door until you hear a click.

Knowledge

Be sure to close the sliding door.
Dust or debris entering may cause malfunction.
Direct sunlight may also cause malfunction.

How to Operate the Navigation CD-ROM


1. In the case of the standard screen

When installed simultaneously with the navigation system, you can play the navigation CD-ROM.

You can play the navigation CD-ROM.

1 Press the NAVI (Current Location) button to enter navigation mode.

② Press the Menu button to display the menu screen.

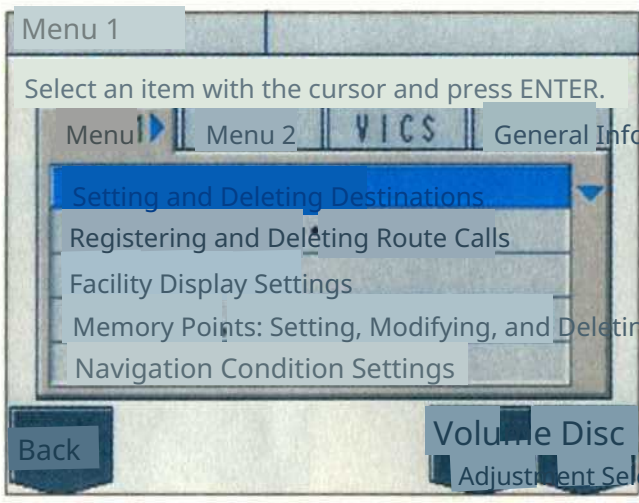


Knowledge

・ In addition to Toyota genuine map CD-ROMs, playback of commercially available Navi Ken software (Ver. 2.1) is also possible. However, while IIS map display is supported, route search and voice guidance are not supported. ・The IIS function's voice is output from all vehicle speakers. However, on some TVs, the IIS function cannot be operated.

Press 3 Disk Select, Switch to the disc selection screen.

Screen During Search (Example)

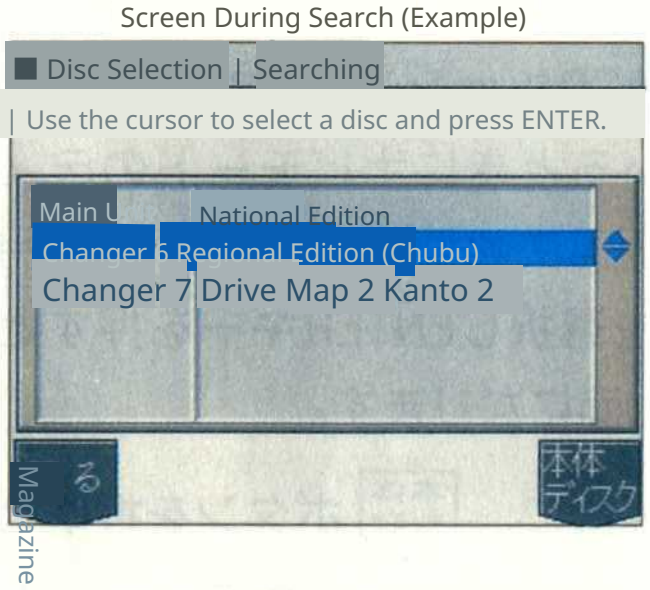


Knowledge

・When inserting the magazine and using the navigation function for the first time, the discs in the magazine will be searched.

・Discs that have already been displayed can be selected even during the search process.

Screen After Search Completion (Example)

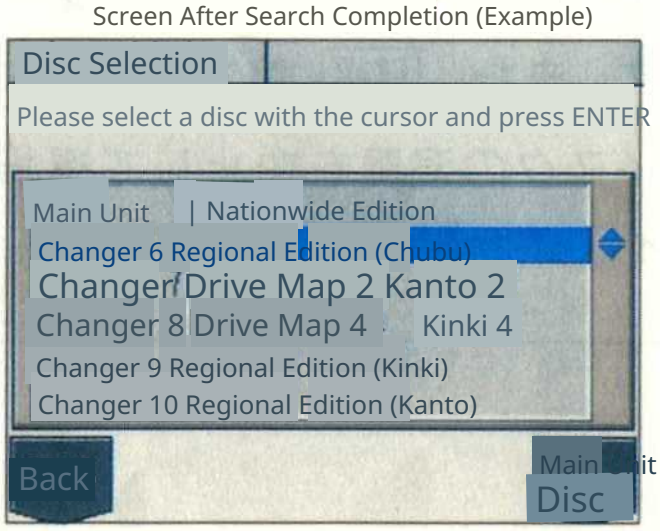


Knowledge

・When the search is complete, "Disc search has been completed" will be displayed.

④ Use the cursor keys to select a disc.

・The color of the selected disc will change.


(例)

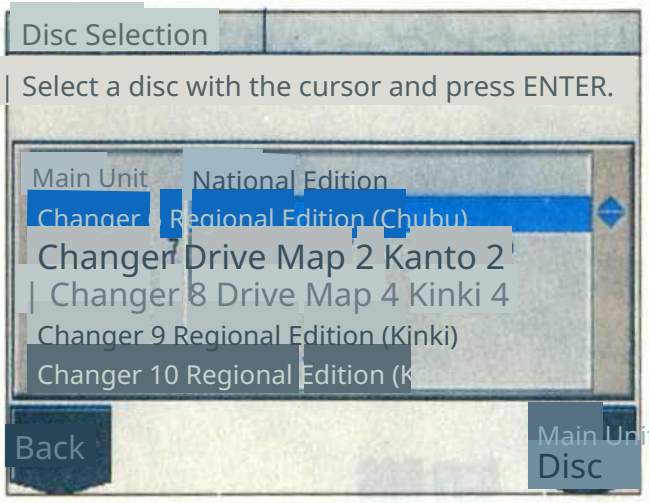




⑤ Press the 5 ENTER key to select the map disc you want to view.

Current Location Display (Example)

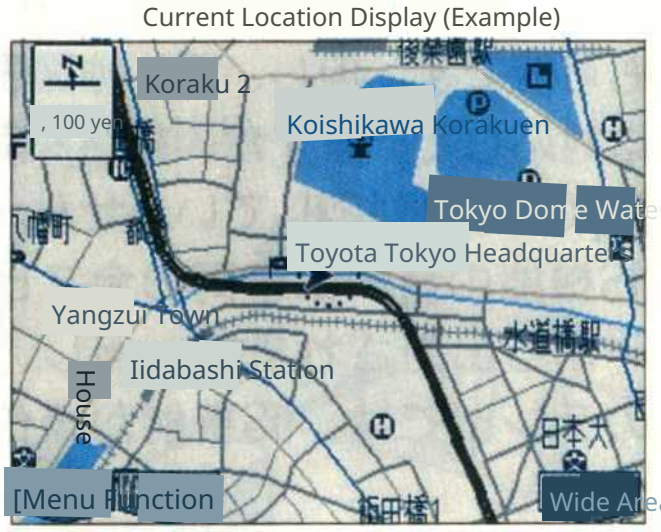

6 For operations after this, Please refer to the navigation system manual.

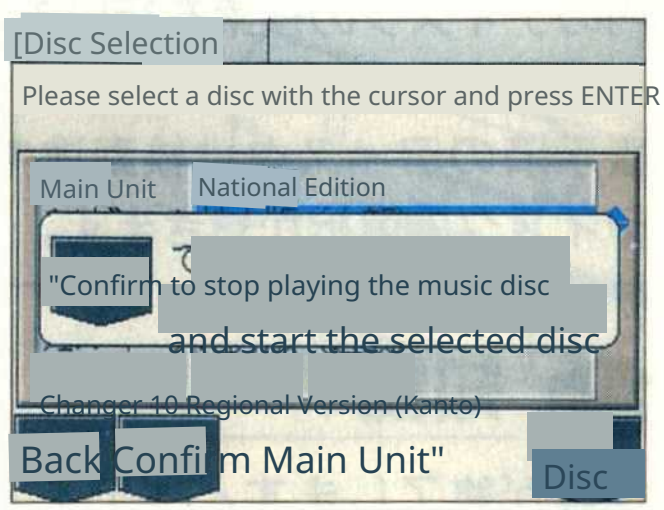

Knowledge

・When playing a music CD on the multi-CD changer, if you switch to the disc selection screen in navigation mode and select the navigation CD-ROM, then press the ENTER key, the screen shown on the left will appear.

In this case, pressing the Icet Main Unit button will continue the music and display the navigation main unit disc.

Also, pressing the confirm button will stop the music disc playback and display the selected


Playback of the selected disc will be displayed.

2. In the case of a wide screen

When installed simultaneously with the navigation system, it is possible to play the navigation on CD-ROM.

1 Press the NAVI (Current Location) button to switch to navigation mode.

② Press the menu button to display the menu screen.

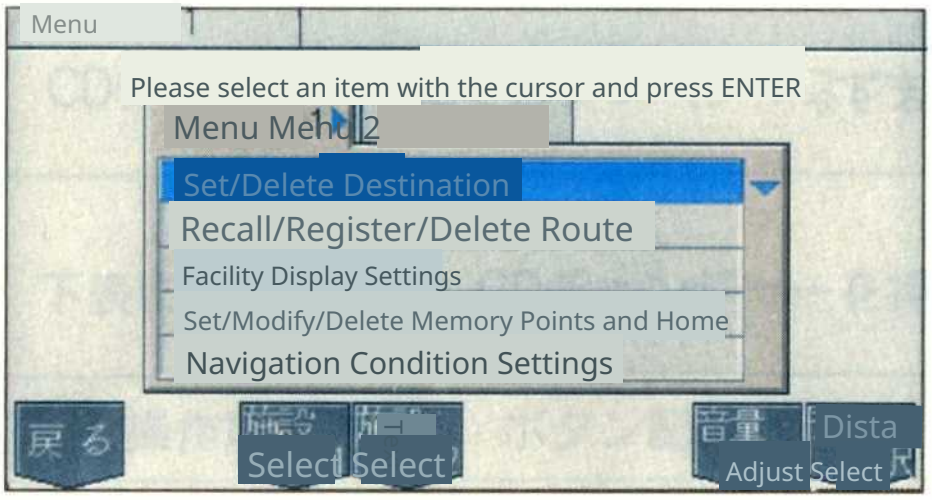


Knowledge

- In addition to the genuine Toyota map CD-ROM, playback of commercially available Navi Ken software (Ver. 2.1) is also possible. However, while IIS map display is supported, route search and voice guidance are not supported. IIS function voice output is through all vehicle speakers. However, on some TVs, the IIS function cannot be operated.

3 Press Disc Select to go to the disc selection screen.


Screen During Search (Example)

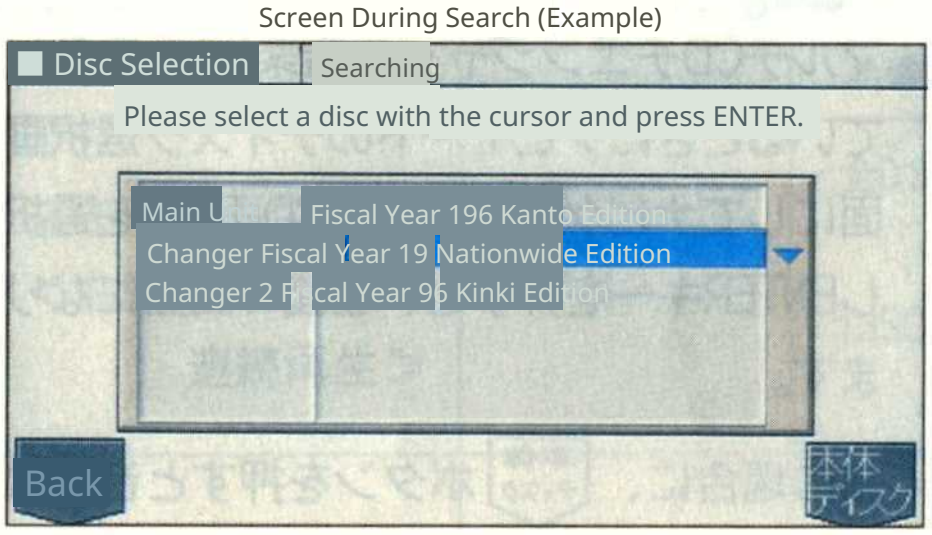

Knowledge

- When inserting the magazine and using the navigation function for the first time, the discs in the magazine will be searched.
- Discs that have already been displayed can be selected even during the search.

Screen After Search Completion (Example)

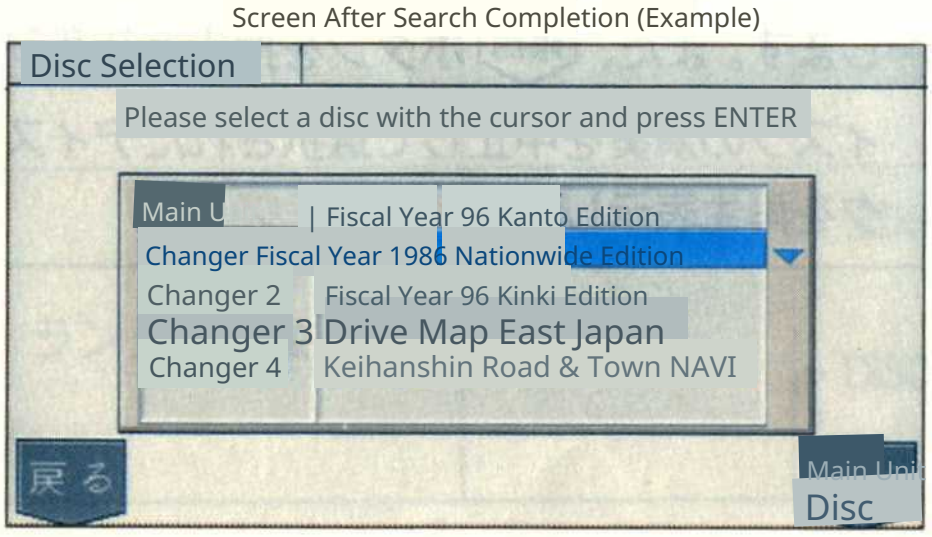


Knowledge


- When the search is completed, "Disc search has been completed" will be displayed.

④ Use the cursor keys to select a disc.

The color of the selected disc changes.


(例)

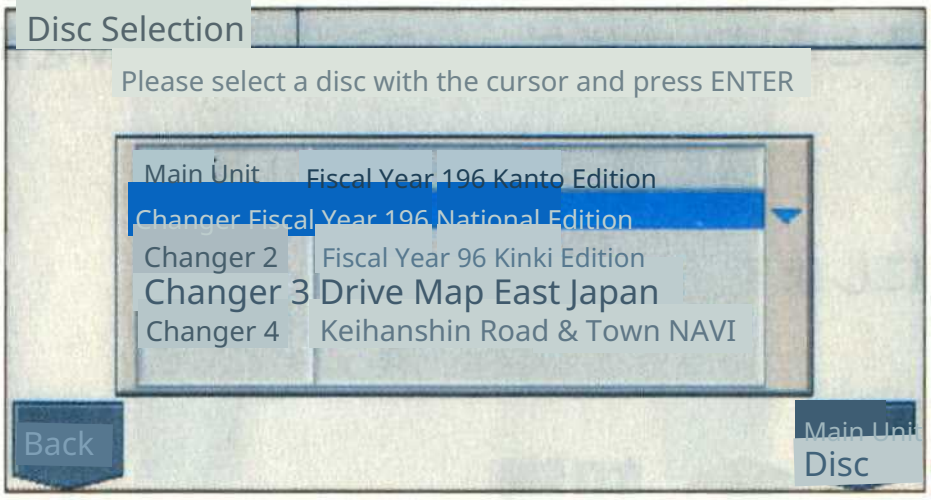

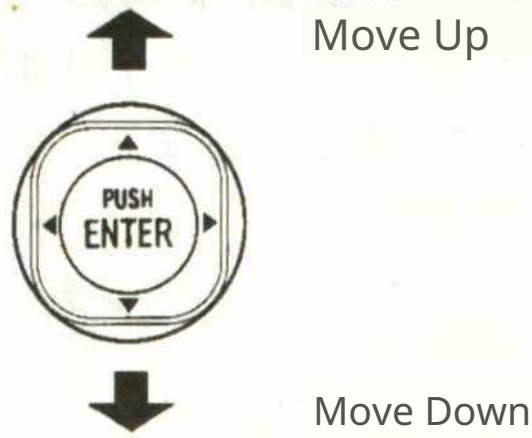


⑤ Press the 5 ENTER key to select the map disc you want to view.

Current Location Display (Example)

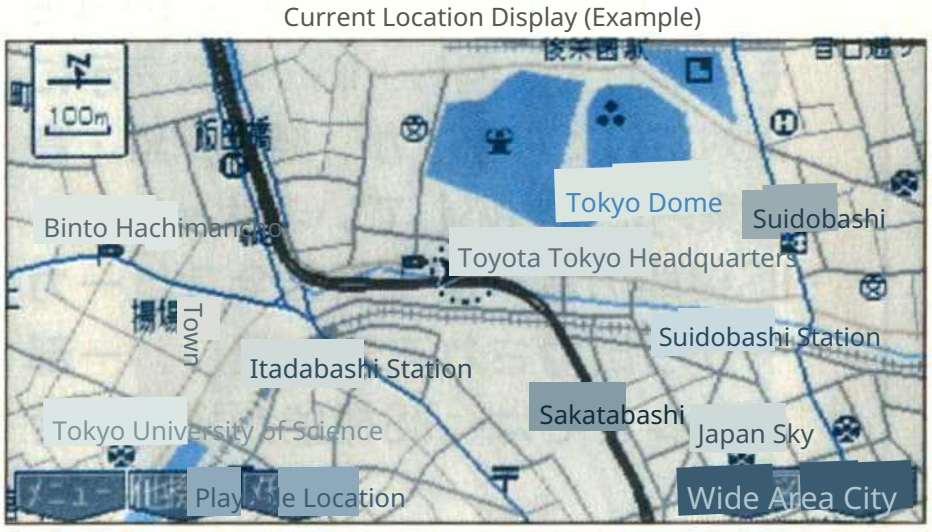

⑥6 For operations after this, Please refer to the navigation system manual.

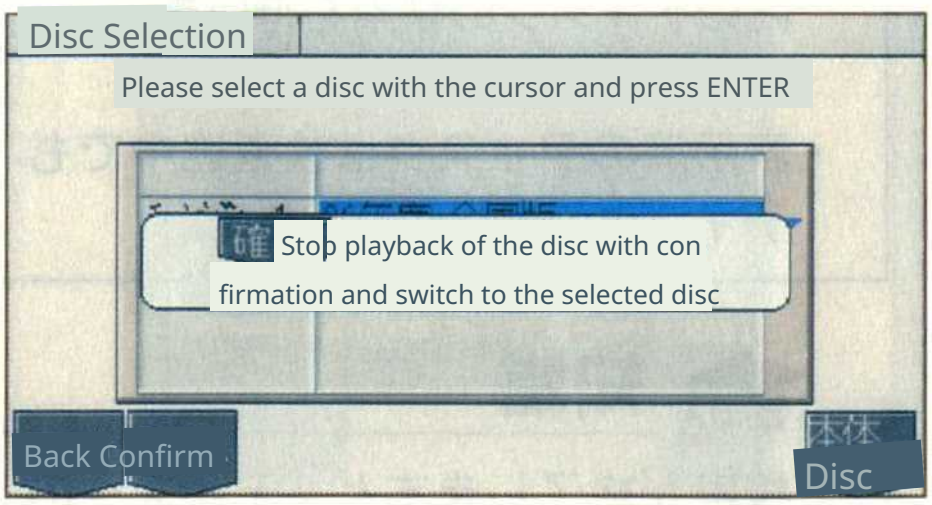

Knowledge

・When playing music CDs on the multi-CD changer, switch to the disc selection screen in navigation mode, select the navigation CD-ROM, and press the ENTER key, the screen shown on the left will appear.

Main Unit
Pressing the Disc button will stop the music

In this case, playback continues, and the navigation main unit disc is displayed. Also, pressing the confirm button stops the music disc playback and displays the selected disc for playback.

About CD changer control operation

For audio systems with standard or manufacturer option equipment,
models equipped with CD changer control function

can use the CD or DISC button as a CD changer controller.

※If the audio system includes a CD player, pressing the button again will restart the CD player.

You can play the navigation CD-ROM.

Knowledge

The CD changer will not operate if there is no magazine (disc) loaded.

You can operate the CD changer based on the table below.

Operation Item	Button Symbol	Operation Procedure
CD <DISC> Selection	∨ DISC ∧	・ Press the disc button ∨ or the person button to select your preferred CD <DISC>.
Track Search <TRACK>	⏮ ⏭ (∨ ∧)	・ Select the track button ⏮ or ⏭ s the di Pres choose your preferred track number on the screen. *Depending on the model, operation may be performed with < or a person.
Fast Forward	⏮ ⏭ (◀◀ ▶▶、∨∧)	・ Fast-forward button ⏮ or ⏭ Press and hold, de Select your preferred part within the disc. *Depending on the model, operation may be performed by ◀◀ ▶▶ ∨ or .
Scan Play About 10 seconds at the beginning of the track Continuous Playback >	SCAN	・ All DISC Scan → Press and hold the scan button until a "beep" sounds to pe rform scan playback of all discs in the magazine. • DISC Scan → Press the scan button once to perform scan pl ayback of the currently selected disc.
Repeat Playback	RPT	• DISC Repeat → Press and hold the repeat button until a "beep" sounds to repeatedly play the currently selected disc. • Single Track Repeat → Press the repeat button once to repeatedly pl ay the currently playing track.
Random Play	RAND	・ All DISC Random → Press and hold the random button until a "beep" sounds to r andomly select tracks from all discs in the magazine. • Disc Random → Press the random button once to randomly sel ect tracks from the currently selected disc.

Specifications


Power Voltage	DC12V (Test Voltage 14.4V) ⊖ Ground
Off Cost 電 Current	Below 2.0A
Pre-out output Impedance	180Ω
Number of channels	2 channels
Multi Signal Processing	16-bit linear
Frequency response	5～20,000Hz
Signal-to-noise ratio	90dB (using IHF-A)
Wow and flutter	Below measurement limit
Dimensions	Changer unit Width 299 × Height 105 × Depth 205 (mm) (Including connector) Magazine Width 130 × Height 52 × Depth 134 (mm)
Mass (weight)	Changer unit 3.2kg Magazine 0.4kg

(Note) Part numbers and circuits are subject to change without notice for performance improvement.

Before Considering a Malfunction

If an abnormality (such as a blown fuse) occurs, please be sure to request repairs from the dealer where you purchased the product. If you replace the fuse or attempt repairs yourself, it may worsen the extent of the malfunction, so please be especially careful.

Please check according to the following table, and if the problem is not resolved, be sure to turn off the power before taking further action.

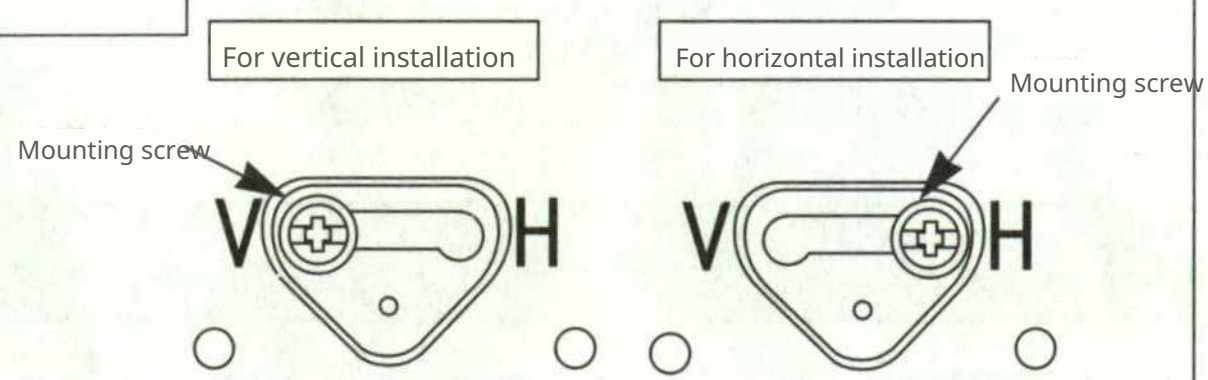Symptom	Cause	Action
Does not operate.	The vehicle's power switch is not turned on.	・Please turn the vehicle key to the "ACC" or "ON" position.
	The magazine is not properly installed.	・Please remove the magazine and reinsert it. (Refer to the section "Inserting and Removing the Magazine" on page 8.)
	No CD (CD-ROM) is loaded in the magazine.	・Please insert a CD (CD-ROM).
Skipping occurs.	The CD (CD-ROM) is severely dirty.	・Please clean the CD (CD-ROM).
	The CD (CD-ROM) has major scratches.	・Please replace the CD (CD-ROM).
	CD (CD-ROM) malfunction.	・Please replace it with another CD (CD-ROM).
	The main unit is not securely installed.	・Please secure it firmly.
	The position of the installation direction change lever is incorrect.	・Please switch as shown in the figure below. 
The magazine does not eject.	Magazine malfunction	・Please contact the retailer where you purchased the product.

If the above measures do not resolve the issue, please contact the retailer where you purchased the product.

After-Sales Service

1. Warranty Card (attached separately)

Please be sure to receive the warranty card from the retailer after confirming that the "purchase date, retailer name," etc. are filled in, read the contents carefully, and keep it in a safe place.

■ During the warranty period

Repairs will be carried out by the retailer where you purchased the product according to the warranty terms. We kindly ask you to bring the product along with the warranty card.

■ After the warranty period has expired

Please contact the retailer where you purchased the product. For products that can be repaired and used, repairs will be made for a fee upon request.

2. Minimum Retention Period for Repair Parts

Replacement performance parts (parts necessary for maintaining functionality) are kept for at least 6 years after production has been discontinued.

3. When you do not understand about after-sales service, etc.

Please contact the retailer where you purchased the product.

4. About the replacement magazine, set, and tray

Please be sure to use the magazine, tray, and CD single adapter that come with the main unit or the following part numbers sold separately.

Magazine set (Toyota part number 08601-00495)
Tray for 12cm CD (Toyota part number 08601-00496)
CD single adapter (Toyota part number 08601-00349)

Accessories

1. Instruction manual
2. Installation manual
3. Complete Set of Mounting Parts
4. Warranty Card
5. Extension cord
6. Ground Wire

Toyota Motor Corporation

YEFM282511A B0596-1116